

To assemble the bed you require

drill-driver, Philips screwdriver, 8mm hex key, hammer, two adults.

Head/foot end (1) – 2 pcs.

Side rail (2) – 2 pcs.

Middle bar (3) – 1 pc.

Middle leg (4) – 1 pc.

Construction bar with legs (5) – 2 pcs.

Maxifix cam (A) – 8 pcs.

Maxifix coupling (B) – 4 pcs.

Maxifix bolt straight (C) – 4 pcs.

Maxifix bolt angle (C) – 4 pcs.

Flat fitting (D) – 2 pcs.

“L” fitting (E) – 2 pcs.

Stabilising pin (F) – 4 pcs.

“UT” fitting (G) – 4 pcs.

4 x 15 screw (short) – 8 pcs.

5 x 25 Spax screw (long) – 24 pcs.

Double-threaded screws – 4 pcs

Washer – 4 pcs.

Nuts – 4 pcs.



1. Step


With the use of 4x15 screws secure the flat fitting (D) to the side rails (2) as per the marked holes.

With the use of Spax 5x25 screws and a drill-driver secure the “UT” fittings (G) to the side rails (2) as per the marked holes. **IMPORTANT:** Use the Spax 5x25 screws (4 pcs. per one fitting).



2. Step

Screw the Maxifix couplings (B) clockwise with the 8mm hex key to the outer holes on the ends of the bed side rails (2). **IMPORTANT:** The coupling has to be screwed until it's aligned with the wood surface (no deeper).

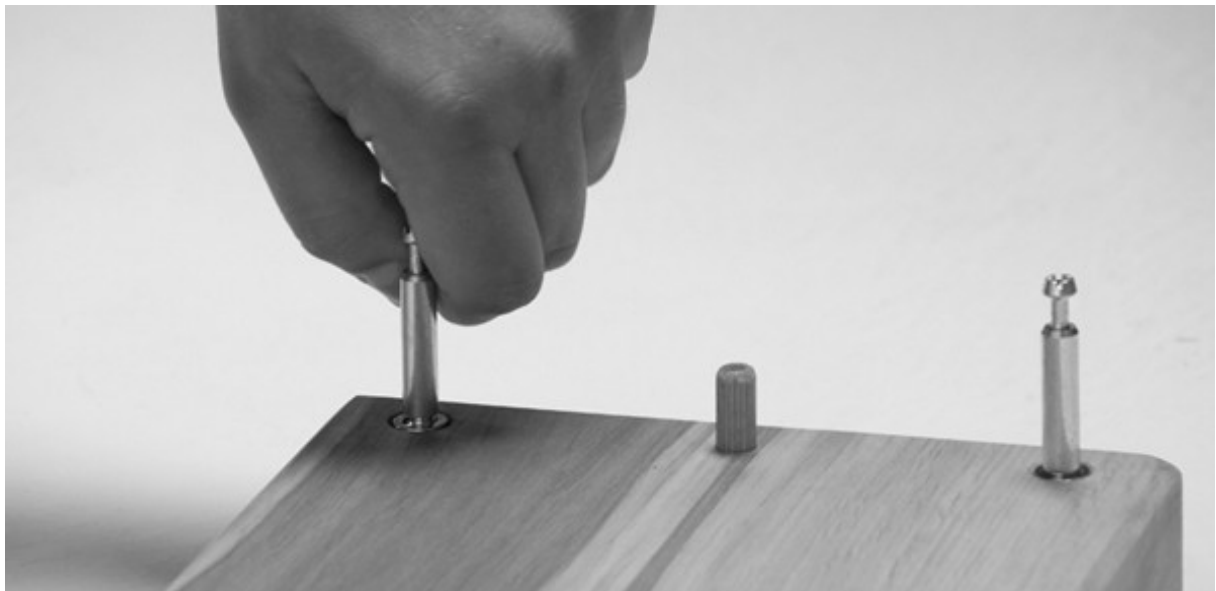

Allgemeiner Sicherheitshinweis:
Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

3. Step

Prepare the Maxifix cams (A) and insert them into the holes drilled in the head and foot ends (1) so that the arrows on the cams are turned in the direction of the edges, where the horizontal holes are drilled.




4. Step

Assemble the side rails and bed ends (1 and 2) fitted with the A, B C and D elements together, so that the bolts (C) and stabilising pins (F) enter the horizontal holes in the bed ends. Lag together so that the two bed elements adjoin. **IMPROTAIN: Two Maxifix cams in the corner should not be tighten all at once but alternately in two to three parial rotations.**

5. Step


Place the bed frame on the construction bars (6) so that the ends of the bars enter the “UT” fittings (G), and secure the construction bar (6) with the Spax 5x25 screws (one on each side) as per the holes in the “UT” fitting (G).

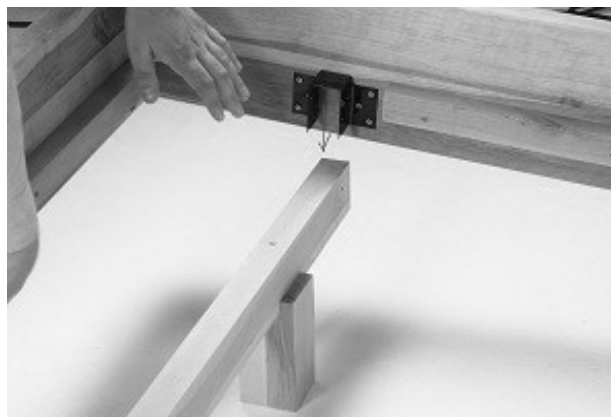

Allgemeiner Sicherheitshinweis:
Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

6. Step

Insert the middle leg (5) in the middle hole of the bar (4). Place the middle bar (4) aligning the “L” fittings (E) with the flat fittings (D).

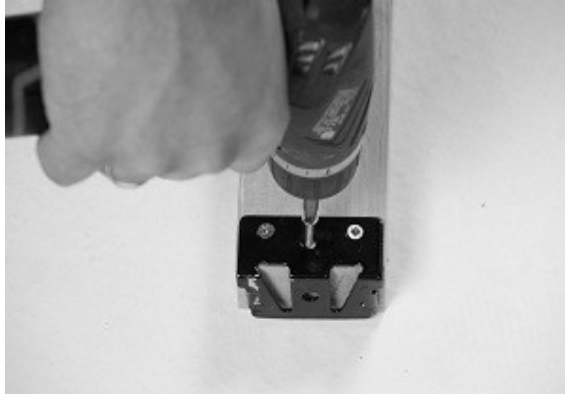

7. Step

With the use of double-threaded screws assemble the wooden bed frame with textile header element: place 4 screws in the marked holes and assemble the textile header with 4 washers and 4 nuts.



Allgemeiner Sicherheitshinweis:
Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

D - Allgemein

Achten Sie bitte auf regelmäßige Lüftung der Räume.

Zu trockene Luft fördert das Verziehen der Hölzer.

Feuchtigkeit und Nässe sofort mit einem trockenen Tuch abwischen.

Alle Oberflächen bitte nicht mit scharfen oder spitzen Gegenständen beschädigen.

Oberflächen bitte nicht mit scharfen Putz- oder Reinigungsmitteln behandeln.

Zur Reinigung der Oberflächen verwenden Sie bitte lediglich ein angefeuchtetes Tuch.

Dieses Produkt ist nur für den Einsatz in Privathaushalten konzipiert.

Massivholz

Feine Äste, Verwachsungen und kleine Risse sind naturbedingt und kein Reklamationsgrund.

Farbdifferenzen und verschiedene Maserungsverläufe zeugen von der Echtheit des Holzes und sein kein qualitativer Mangel.

Lackierte Oberflächen

Gegenstände bitte nicht ohne geeigneten Untersetzer auf den Oberflächen abstellen.

Eventuell sichtbare Polier- und Schleifspuren sind produktionsbedingt und stellen keinen qualitativen Mangel dar.

Geölte und gewachste Oberflächen

Vermeiden Sie bitte Staunässe auf der Oberfläche und entfernen Sie Getränkereste sofort.

GB - General

Please make sure that your rooms are ventilated regularly.

Very dry or very humid air will support the warping of wooden products.

Wipe off liquids and moist spots immediately with a soft and dry cloth.

Prevent sharp and pointed objects from direct contact with the surface.

Do not use washing powders or any other substances containing abrasives to clean the surface.

This product is conceived only for private household.

Solid wood

Little knots, connation and little cracks in the wood are typical natural characteristic of wood and not a reason for a claim. Differences in color and grain are also typical for solid wood and not a qualitative defect.

Lacquered surfaces

Please don't put any item without table mat on the surface, it could cause heavy scratches. Maybe visible polish marks are conditions of production and not a reason for a claim.

Oiled an waxed surfaces

Please take care of wetness on the surface and clean it at once.



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!