

To assemble the bed you require

- drill-driver, Philips screwdriver, 8mm hex key, hammer, two adults.

The set includes:

- Head/foot end (1) – 2 pcs.
- Side rail (2) – 2 pcs.
- Middle bar (3) – 1 pc.
- Middle leg (4) – 1 pc.
- Construction bar with legs (5) – 1 pcs.
- Maxifix cam (A) – 8 pcs.
- Maxifix coupling (B) – 8 pcs.
- Maxifix bolt (C) – 8 pcs.
- Flat fitting (D) – 2 pcs.
- "L" fitting (E) – 2 pcs.
- Stabilising pin (F) – 4 pcs.
- "UT" fitting (G) – 2 pcs.
- 4 x 15 screw (short) – 14 pcs.
- 5 x 25 Spax screw (long) – 12 pcs.

1. Step

Screw the Maxifix couplings (B) clockwise with the 8mm hex key to the outer holes on the ends of the bed side rails (2). **IMPORTANT:** The coupling has to be screwed until it's aligned with the wood surface (no deeper).



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

2. Step

Insert the stabilising pin (F) in the middle hole on both ends of the side rails (2) and hammer until it reaches the bottom.

3. Step

With the use of 4x15 screws secure the flat fitting (D) to the side rails (2) as per the marked holes.



4. Step

With the use of Spax 5x25 screws and a drill-driver secure the "UT" fittings (G) to the side rails from the foot end (2) as per the marked holes. **IMPORTANT:** Use the Spax 5x25 screws (4 pcs. per one fitting).




Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

5. Step

Prepare the two steel Maxifix bolts (C) and screw them clockwise to the Maxifix couplings (B).

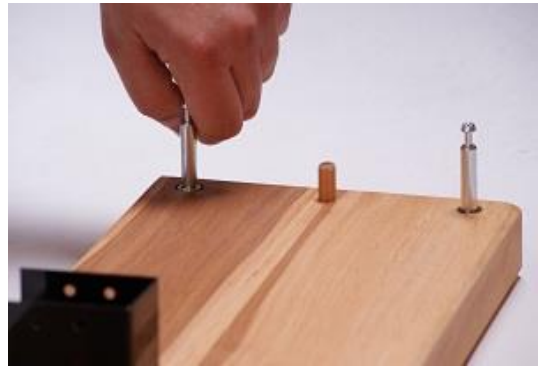

6. Step

Prepare the Maxifix cams (A) and insert them into the holes drilled in the head and foot ends (1) so that the arrows on the cams are turned in the direction of the edges, where the horizontal holes are drilled.



7. Step

Assemble the side rails and bed ends (1 and 2) fitted with the A, B C and D elements together, so that the bolts (C) and stabilising pins (F) enter the horizontal holes in the bed ends. Lag together so that the two bed elements adjoin.



8. Step

With the use of Philips screwdriver turn the Maxifix cams (A) all the way clockwise. The cam should turn at least 135 degrees ($3/8$ of a turn) to secure the elements.



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

9. Step

Place the bed frame on the construction bar (6) so that the ends of the bar enter the "UT" fittings (G), and secure the construction bar (6) with the Spax 5x25 screws (two screws per one fitting on each side), as per the holes in the "UT" fitting (G).



10. Step

Secure the "L" (E) fittings to the middle bar (4) with the use of a drill-driver and 4x15 screws.

11. Step

Insert the middle leg (5) in the middle hole of the bar (4).

Place the middle bar (4) aligning the "L" fittings (E) with the flat fittings (D).

Insert the rack and the mattress in the frame.

We wish you a pleasant sleeping!



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

D - Allgemein

Achten Sie bitte auf regelmäßige Lüftung der Räume.

Zu trockene Luft fördert das Verziehen der Hölzer.

Feuchtigkeit und Nässe sofort mit einem trockenen Tuch abwischen.

Alle Oberflächen bitte nicht mit scharfen oder spitzen Gegenständen beschädigen.

Oberflächen bitte nicht mit scharfen Putz- oder Reinigungsmitteln behandeln.

Zur Reinigung der Oberflächen verwenden Sie bitte lediglich ein angefeuchtetes Tuch.

Dieses Produkt ist nur für den Einsatz in Privathaushalten konzipiert.

Massivholz

Feine Äste, Verwachsungen und kleine Risse sind naturbedingt und kein Reklamationsgrund.

Farbdifferenzen und verschiedene Maserungsverläufe zeugen von der Echtheit des Holzes und sein kein qualitativer Mangel.

Lackierte Oberflächen

Gegenstände bitte nicht ohne geeigneten Untersetzer auf den Oberflächen abstellen.

Eventuell sichtbare Polier und Schleifspuren sind produktionsbedingt und stellen keinen qualitativen Mangel dar.

Geölte und gewachste Oberflächen

Vermeiden Sie bitte Staunässe auf der Oberfläche und entfernen Sie Getränkereste sofort.

GB - General

Please make sure that your rooms are ventilated regularly.

Very dry or very humid aid will support the warping of wooden products.

Wipe off liquids and moist spots immediately with a soft and dry cloth.

Prevent sharp and pointed objects from direct contact with the surface.

Do not use washing powders or any other substances containing abrasives to clean the surface.

This product is conceived only for private household.

Solid wood

Little knots, connation and little cracks in the wood are typical natural characteristic of wood and not a reason for a claim. Differences in color and grain are also typical for solid wood and not a qualitative defect.

Lacquered surfaces

Please don't put any item without table mat on the surface, it could cause heavy scratches. Maybe visible polish marks are conditions of production and not a reason for a claim.

Oiled an waxed surfaces

Please take care of wetness on the surface and clean it at once.



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!